



How to update files on the DWX8000USB Digital Message Player

For Windows

1. Plug the USB flash drive into an available USB port on your computer
2. From Desktop: Go to My Computer or Computer Go to Devices with Removable Storage
3. Double Click on the corresponding drive (if not sure, you can always unplug and plug the USB stick back in to see which drive appears and disappears)
4. Once the window for device is open, delete unnecessary/old MP3 file(s) and be sure to empty the trash
5. Copy and paste new MP3 file(s) onto the flash drive
6. At this point the files are on the USB flash drive and ready to be played on the DWX-8000USB
7. Insert the flash drive into the DWX-8000USB. The file will automatically begin playing and looping continuously

For Macs

1. Plug the USB flash drive into an available USB port on your computer
2. From Desktop: Locate the USB flash drive on your desktop – probably named "Untitled"
3. Double click on the corresponding drive to open the window
4. Once the window for device is open, delete unnecessary/old MP3 file(s) and be sure to empty the trash
5. Copy and paste new MP3 file(s) onto the flash drive
6. At this point the files are on the USB flash drive and ready to be played on the DWX-8000USB
7. Insert the flash drive into the DWX-8000USB. The file will automatically begin playing and looping continuously